



PRIVACY PANEL SYSTEM

POST KIT

ASSEMBLY INSTRUCTIONS

EASY AS

A

B

C

posts

panels & wood
(Sold separately)

accessories
(Sold separately)

54" / 137cm

78" / 198cm

Dorset

Shutter

Wesley

surface mount

ground stake

wood brackets

fence connector

1

2

3

For use with Distinct Home™ panels. Add wood or composite to create a DISTINCT look!

Distinct™ Privacy System Combinations:



- All Distinct™ panels

2 Post Kits

3 Distinct Panels
- Distinct™ panels & wood/composite boards

2 Post Kits

2 Distinct Panels

4 Wood/composite boards
- 1"x 6" 48" (3 x 15 x 122 cm) wood / composite board (sold separately)

All wood/composite boards

2 Post Kits

12 Wood/composite boards

1 Wood Brackets Kit (sold separately)

OUTDOOR & INDOOR APPLICATIONS



90 Degree Privacy Screen Fence Decoration Privacy Screen with Wood/Composite Panels

For inspiration and various Distinct Privacy Screen builds, please visit www.distincthomeliving.com

POST KIT CONTENTS

ITEM	6"6" POST KIT QTY	4"6" POST KIT QTY	1	2	3	4
1 Post	1	1				
2 Base	1	1				
3 Base Cap	1	1				
4 A Left Wood Bracket	6	4				
5 B Right Wood Bracket	6	4				
6 Post Cap	1	1				
7 Hole Covers	12	8				
8 Panel Joiner	2	2				
9 Screw A (10-24 x 5/16")	36	24				
10 Screw B (10-24 x 1/2")	2	2				
11 Lock Washer	38	26				
12 90° Degree Template	1	1				
13 Self Tapping Screw	8	8				
14 Allen Key	1	1				

* Instructions show 6'6" Distinct Privacy Screen build. For 4'6" build, one less panel is needed.

1

Identify and lay out left brackets (A) and right brackets (B) as shown in the diagram.

2

Properly orient brackets (as shown) before attaching all brackets to post using supplied lock washer and screw A (using supplied Allen key).

3

Install the base cover and base onto the post, from the bottom. Make sure holes on post and base are aligned.

4

Lift Privacy Screen up and move assembled screen to final location. Visit www.distincthomeliving.com for instructions to secure base to floor & additional builds.

5

Secure Post into Base with screw B and washer on both sides.

6

Place Post Cap (x2), hole covers (x24) and panel joiners (x2) to assembled Privacy Screen.

Visit www.distincthomeliving.com for instructions to secure base to floor, including installation using a Base, a Surface Mount, or a Ground Stake

SCREEN EXTENSION INSTRUCTIONS

1

Use provided hardware to attach brackets to assembled Privacy Screen as shown in the diagram.

2

Use provided hardware to build an additional post as shown in the diagram. Attach the middle panel first.

3

Lift up the newly assembled post and attach it to existing Privacy Screen.

4

Attach remaining two panels to the Privacy Screen Extension. Follow Steps 5 & 6 of Privacy Screen Instructions.

CAUTION
Always wear safety goggles and gloves throughout this project.

IMPORTANT!
If there are any missing or defective parts, please DO NOT RETURN PRODUCT TO THE STORE. Contact our customer service team at info@multyhome.com or 1 800 506 6664 and we will make sure you receive a replacement part as quickly as possible.

VO72103


SYSTÈME DE PANNEAU DE CONFIDENTIALITÉ
KIT DE POTEAU

INSTRUCTIONS D'ASSEMBLAGE



DISTINCTHOMELIVING.COM

FACILE COMME

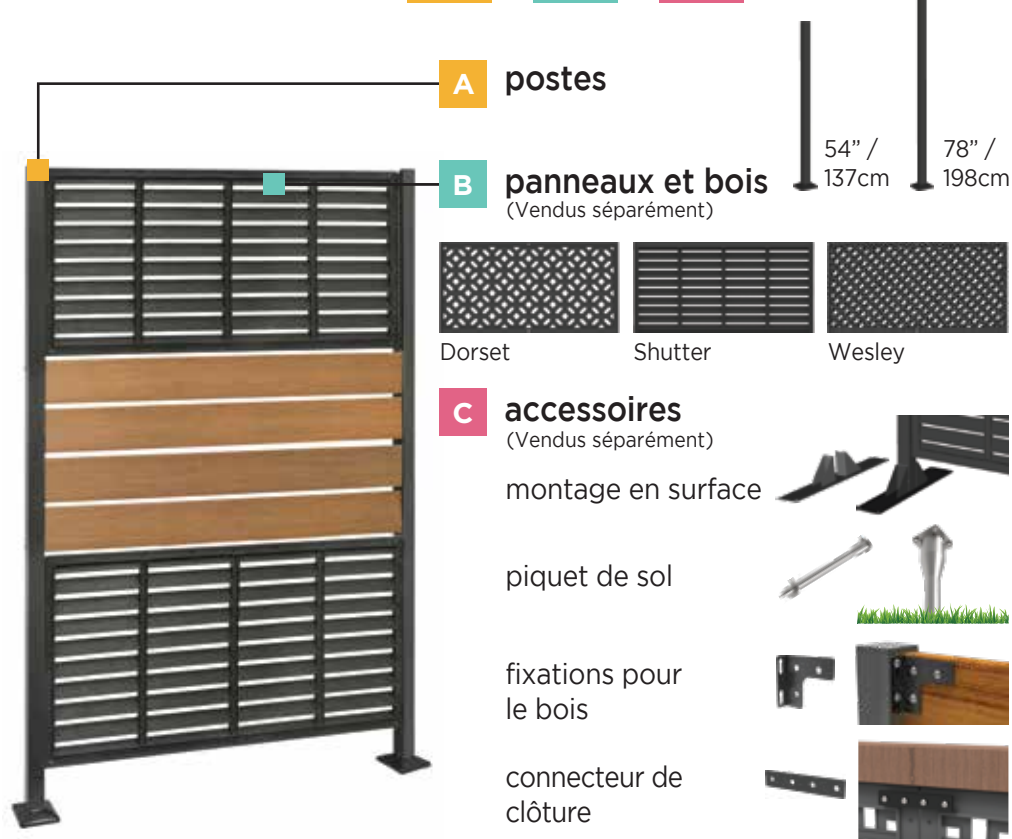

À utiliser avec les panneaux Distinct Home^{MC}. Ajouter du bois ou composite pour créer un look DISTINCT!

Combinaisons du système de confidentialité Distinct^{MC} :



Tous en panneaux Distinct ^{MC}	Panneaux Distinct ^{MC} et planches de bois/composite	Tout en planches de bois/composite
2 Kits de poste	2 Kits de poste	2 Kits de poste
3 Panneaux Distinct	2 Panneaux Distinct	12 Planches de bois/composite
	4 Planches de bois/composite	1 Fixations pour le bois (Vendus séparément)

USAGES
EXTÉRIEURS ET INTÉRIEURS




Écran d'intimité en angle droit Clôture décorative Écran d'intimité avec panneaux en bois/composite

Pour plus d'idées et d'exemples de construction d'écran d'intimité Distinct, visitez www.distincthomeliving.com

CONTENU DU KIT DE POTEAU


ARTICLE	6"6" QTÉ DE KIT DE POTEAU	4"6" QTÉ DE KIT DE POTEAU
1 Poteau	1	1
2 Base	1	1
3 Couvercle de base	1	1
4 A Fixations pour le bois gauche	6	4
5 B Fixations pour le bois droit	6	4
6 Couvercle de poteau	1	1
7 Cache-trou	12	8
8 Raccord de panneaux	2	2
9 Vis A (10-24 x 5/16")	36	24
10 Vis B (10-24 x 1/2")	2	2
11 Rondelle de blocage	38	26
12 Gabarit de 90°	1	1
13 Vis autotaraudeuse	8	8
14 Clé Allen	1	1

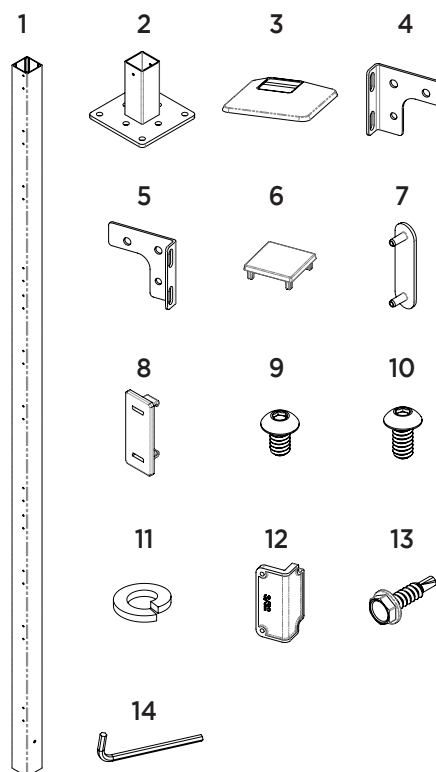

* Ces instructions concernent le montage d'un écran d'intimité Distinct de 6 pi 6 po. Celui d'un écran de 4 pi 6 po nécessite un panneau de moins.


1

Identifiez et disposez les supports de gauche (A) et ceux de droite (B) tel qu'illustré sur le diagramme.

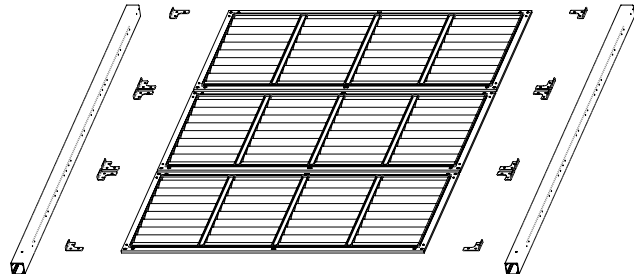


2

Orientez correctement tous les supports (tel qu'illustré) avant de les fixer au montant à l'aide des rondelles de blocage et des vis A fournies (en utilisant la clé Allen fournie).

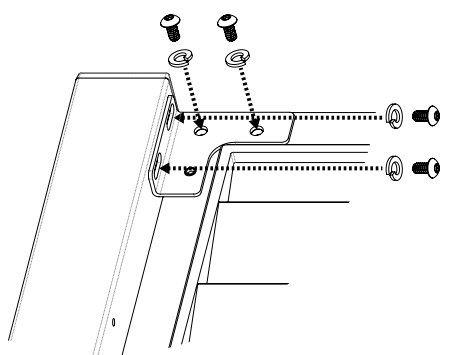


3

Installez le couvercle de la base et la base au bas du montant. Veillez à bien aligner les trous du montant et de la base.

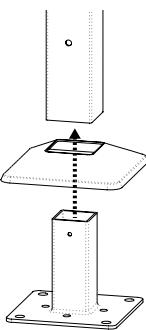


4

Soulevez l'écran d'intimité assemblé et déplacez-le là où il doit aller. Visitez www.distincthomeliving.com pour savoir comment fixer la base au sol et pour d'autres instructions de montage.

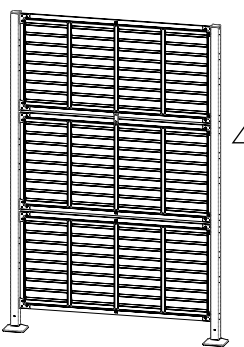


5

Fixez le montant à la base à l'aide d'une vis B et d'une rondelle des deux côtés.

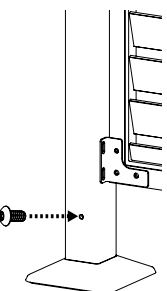

6

Fixez 2 couvercles de montant, 24 cache-trou et 2 raccords de panneaux à l'écran d'intimité assemblé.

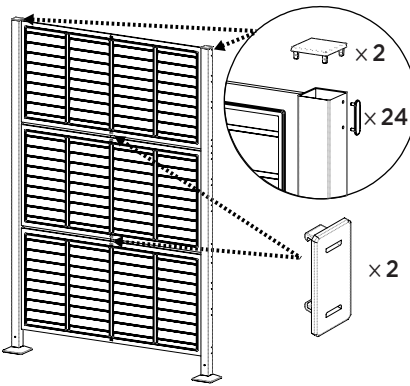


Rendez-vous à www.distincthomeliving.com pour des instructions sur la façon de fixer la base au plancher, y compris l'installation à l'aide d'une base, d'un montage en surface ou d'un piquet de sol

INSTRUCTIONS DE MONTAGE D'UNE EXTENSION D'ÉCRAN


1

Fixez les supports à l'écran d'intimité assemblé à l'aide des pièces de quincaillerie fournies, tel qu'illustré sur le diagramme.

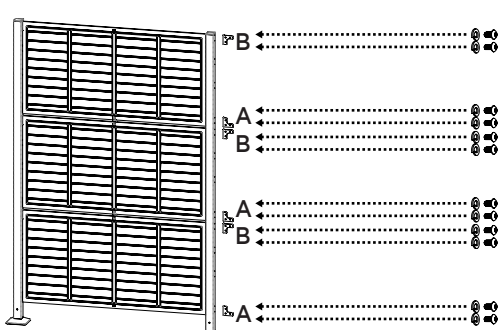


2

Assemblez un autre montant à l'aide des pièces de quincaillerie fournies. Fixez le panneau du milieu.

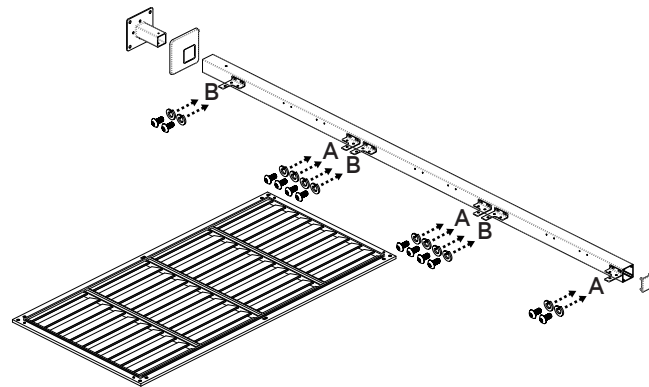


3

Soulevez le montant que vous venez d'assembler et fixez-le à l'écran d'intimité.

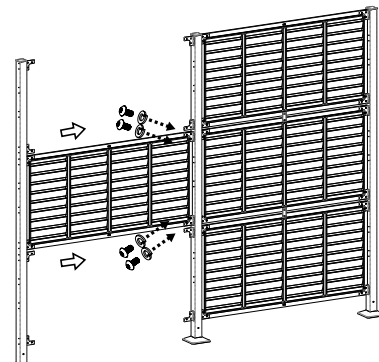

4

Fixez les deux autres panneaux à l'extension de l'écran d'intimité en suivant les étapes 5 et 6 des instructions d'assemblage de l'écran d'intimité.

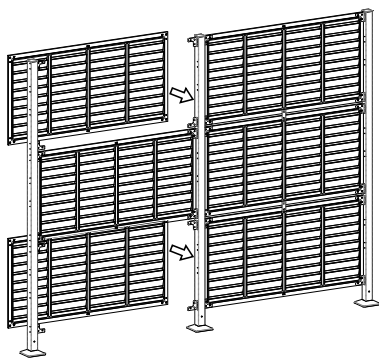

CAUTION

Vous devez porter des lunettes et des gants de protection pendant toute la durée des travaux.

IMPORTANT!

Si une pièce est manquante ou abîmée, veuillez NE PAS RETOURNER LE PRODUIT AU MAGASIN. Communiquez avec notre service à la clientèle à info@multyhome.com ou au 1 800 506 6664 et nous veillerons à vous faire parvenir une pièce de rechange dans les plus brefs délais.